

【VoLTE】 Wi-Fi 通話 (Wi-Fi Calling)

使用時須連線 Wi-Fi 網路



1. 功能表 → 按



2. 設定 → 按



3. 更多內容 → 按



4. Wi-Fi 通話 → 按



5. 開啟 → 按



6. 撥號偏好 → 按

7. 自行選擇 → 按
(例：Wi-Fi 優先)

8. 完成